

MEASURING INSTRUCTIONS FOR: Cellular Shades


Inside Mount:

Standard Inside Mount:


Product	Minimum Depth Req'd
7/16" Single Cell	1 1/8"
3/4" Single Cell	1 1/2"
3/8" Double Cell	1 1/2"

Or If Flush Mounting:

Product	Flush Mount Depth
7/16" Single Cell	2 1/2"
3/4" Single Cell	3 1/2"
3/8" Double Cell	3 1/2"

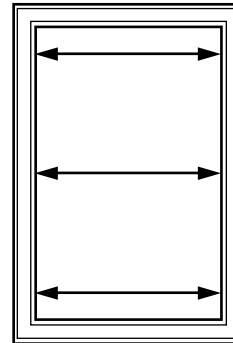

Measure Width

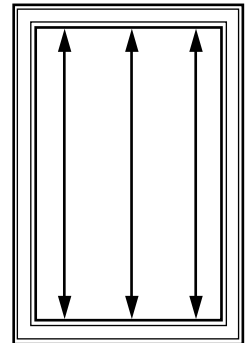


Measure Height


With a steel measuring tape, measure the width of the window frame opening at the top, middle, and bottom. Record the narrowest measurement. Then measure the height at the left, center, and right of the window frame opening. Record the shortest measurement. Make note of any projecting obstacles such as cranks or handles that would get in the way of the shade. ***Please do not take any deductions from your actual measurements for an inside mount. A 1/2" deduction will be taken at our factory.***

Outside Mount:

With a steel measuring tape, measure the width of the area you would like to cover at the top, middle and bottom (include at least 1" beyond the window opening on each side). Record the largest measurement. Then measure the height of the area you would like to cover at the left, center and right (include at least 1 1/2" above the top of the window opening). Record the largest measurement. Please make sure there are no rough surfaces that the fabric could come in contact with during normal operation, as this can cause the fabric to fray over time. ***No deductions are taken from your actual measurements for an outside mount. The product will be made to the size specified.***

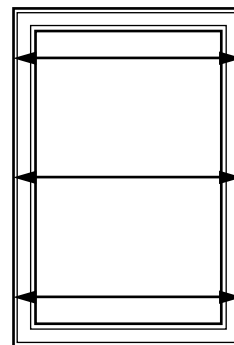

Measure Width

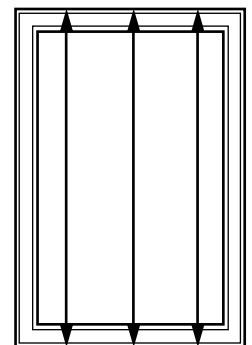

Measure Height