

MEASURING INSTRUCTIONS FOR: **Faux Wood Blinds**


Inside Mount:

Standard Inside Mount:


Product	Minimum Depth Req'd
2" Faux Wood	1"
2 1/2" Faux Wood	1"
2" Premium Faux Wood	1"

Or If Flush Mounting:

Product	Flush Mount Depth
2" Faux Wood	3"
2 1/2" Faux Wood	3"
2" Premium Faux Wood	3"

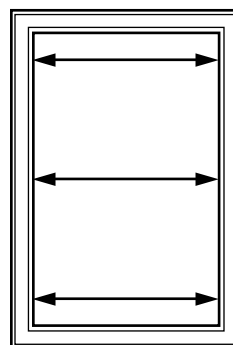

Measure Width

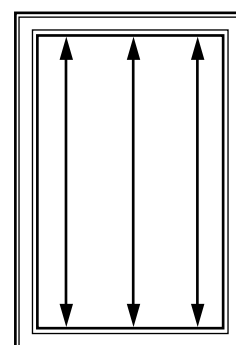


Measure Height


With a steel measuring tape, measure the width of the window frame opening at the top, middle, and bottom. Record the narrowest measurement. Then measure the height at the left, center, and right of the window frame opening. Record the shortest measurement. Make note of any projecting obstacles such as cranks or handles that would get in the way of the blind. ***Please do not take any deductions from your actual measurements for an inside mount. A 1/2" deduction will be taken at our factory.***

Outside Mount:

With a steel measuring tape, measure the width of the area you would like to cover at the top, middle and bottom (include at least 1 1/2" beyond the window opening on each side). Record the largest measurement. Then measure the height of the area you would like to cover at the left, center and right (include at least 1 1/2" above the top of the window opening). Record the largest measurement. ***No deductions are taken from your actual measurements for an outside mount. The product will be made to the size specified.***

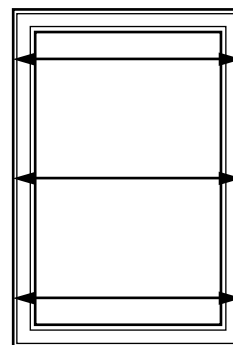

Measure Width

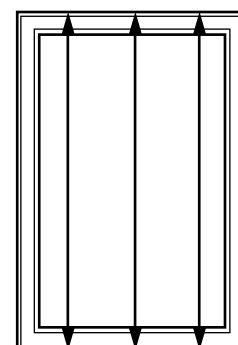

Measure Height